


# Electronic Remote Control Roller Blind System III



- |          |                 |               |      |
|----------|-----------------|---------------|------|
| BLACK 5  | touches RED 1   | = UP & STOP   | (S1) |
| YELLOW 4 | touches RED 1   | = DOWN & STOP | (S2) |
| YELLOW 4 | touches BLUE 2  | = SET         | (S3) |
| BLACK 5  | touches BLUE 2  | = CONFIRM     | (S4) |
| YELLOW 4 | touches GREEN 3 | = R & +       | (S5) |
| BLACK 5  | touches GREEN 3 | = S & -       | (S6) |

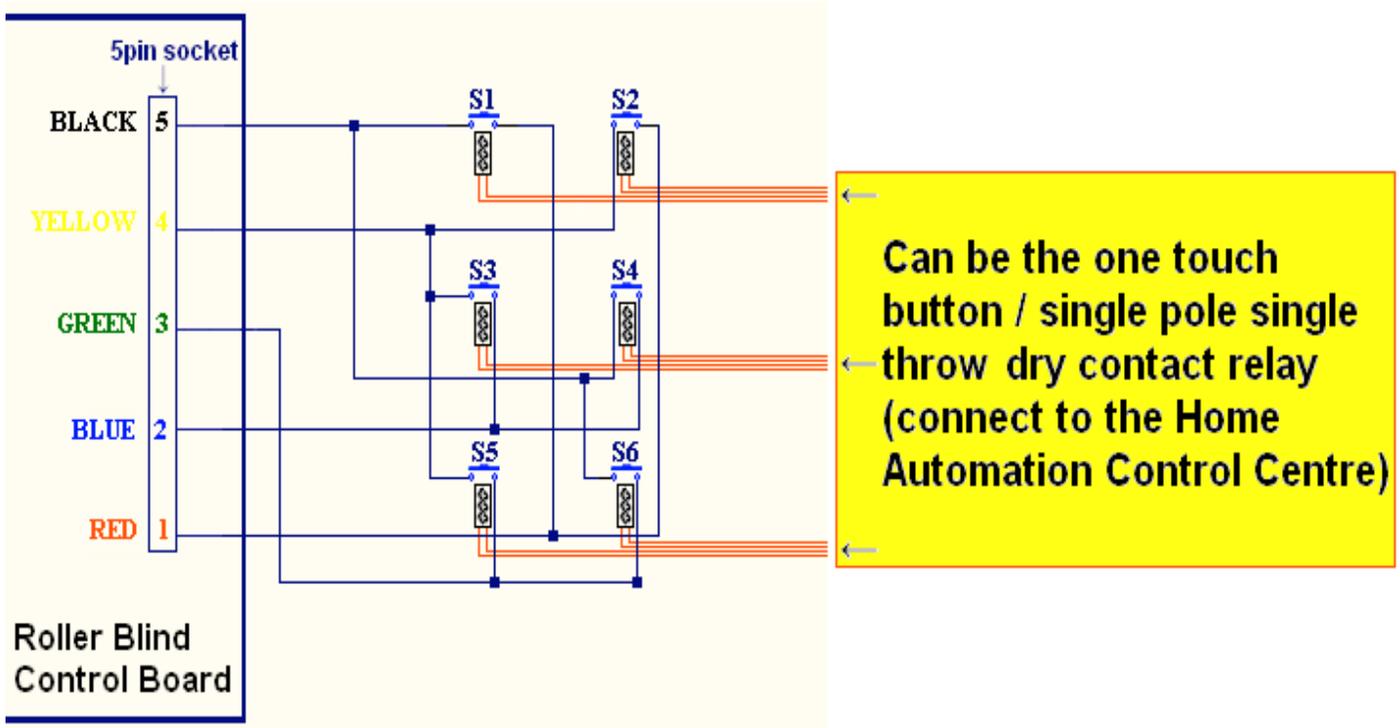